




# Bucket Punching Guide For Belts

## Styles, LF, MF, HF and HFO Continuous Discharge Elevator Buckets

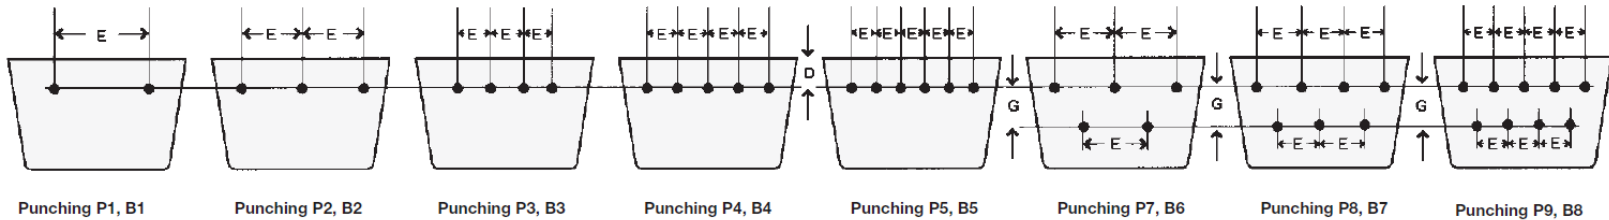

Bucket Size, (Nominal) Inches			Belt Width, Inches	Punching	Inches			
Length	Projection	Depth			E	Bolt Dia.	D	G
8	5	7-3/4	9-10	P7, B6	3	1/4, 5/16	3-3/8	1
8	5	8-1/2	9-10	P7, B6	3	1/4, 5/16	3-3/4	1
9	6	9-1/4	0	P7, B6	3	1/4, 5/16	4-1/8	1
10	5	7-3/4	11-12	P7, B6	3-1/2	1/4, 5/16	3-3/8	1
10	5	8-1/2	11-12	P7, B6	3-1/2	1/4, 5/16	3-3/4	1
10	6	9-1/4	11-12	P7, B6	3-1/2	1/4, 5/16	4-1/8	1
10	6	10	11-12	P7, B6	3-1/2	1/4, 5/16	4-1/2	1
10	7	11-5/8	11-12	P7, B6	3-1/2	1/4, 5/16	5-5/16	1
10	7	12-1/2	11-12	P7, B6	3-1/2	1/4, 5/16	5-3/4	1
10	8	11-5/8	11-12	P7, B6	3-1/2	1/4, 5/16	5-5/16	1
11	6	9-1/4	12	P7, B6	4	1/4, 5/16	4-1/8	1
12	5	7-3/4	13-14	P7, B6	4-1/2	1/4, 5/16	3-3/8	1
12	6	9-1/4	13-14	P7, B6	4-1/2	1/4, 5/16	4-1/8	1
12	6	10	13-14	P7, B6	4-1/2	1/4, 5/16	4-1/2	1
12	7	11-5/8	13-14	P7, B6	4-1/2	1/4, 5/16	5-5/16	1
12	7	11-3/4	13-14	P7, B6	4-1/2	1/4, 5/16	5-3/8	1
12	7	12-1/2	13-14	P7, B6	4-1/2	1/4, 5/16	5-3/4	1
12	8	11-5/8	13-14	P7, B6	4-1/2	1/4, 5/16	5-5/16	1
12	8	12-1/2	13-14	P7, B6	4-1/2	1/4, 5/16	5-3/4	1
14	7	11-5/8	15-16	P8, B7	4	5/16	5-5/16	1
14	7	12-1/2	15-16	P8, B7	4	5/16	5-3/4	1
14	8	11-5/8	15-16	P8, B7	4	5/16	5-5/16	1
14	8	11-3/4	15-16	P8, B7	4	5/16	5-3/8	1
14	8	12-1/2	15-16	P8, B7	4	5/16	5-3/4	1
16	7	11-3/4	18	P8, B7	4-1/2	5/16	5-3/8	1
16	8	11-5/8	18	P8, B7	4-1/2	5/16	5-5/16	1
16	8	12-1/2	18	P8, B7	4-1/2	5/16	5-3/4	1
16	12	17-5/8	18	P8, B7	4-1/2	5/16	8-5/16	1
16	12	18-5/8	18	P8, B7	4-1/2	5/16	8-13/16	1
18	8	11-5/8	20	P8, B7	5	5/16	5-5/16	1
18	10	15	20	P8, B7	5	5/16	7	1
20	8	11-5/8	22	P9, B8	4	5/16	5-5/16	1
20	12	17-5/8	22	P9, B8	4	5/16	8-5/16	1
20	12	18-5/8	22	P9, B8	4	5/16	8-13/16	1
24	10	11-5/8	26	P9, B8	5	5/16	5-5/16	1
24	12	17-5/8	26	P9, B8	5	5/16	8-5/16	1
24	12	18-5/8	26	P9, B8	5	5/16	8-13/16	1

